

[Tippmann X7 Operator Group](#) > [Other Markers and Equipment Section](#) > [Gear](#) > [Vests and Packs](#)
HOWTO: Make a Single Molle Pod Pouch

Welcome, bravodelta.

You last visited: 02-20-2014 at 10:31 PM
[Private Messages](#): Unread 0, Total 8.

[Calendar](#)
[Search](#)
[New Posts](#)
[Mark Forums Read](#)
[Open Buddy List](#)
[Log Out](#)
[ADD REPLY](#)

Page 1 of 4 **1** 2 3 > Last »

[LinkBack](#) [Thread Tools](#) [Search this Thread](#) [Rate Thread](#) [Display Modes](#)

12-05-2009, 06:43 PM

#1 (permalink)

[REP](#)


Join Date: Jan 2008
 Posts: 23,884
 Points: 64612
 Power: 1537


Kanuck

OFF

I keel you! ;)



HOWTO: Make a Single Molle Pod Pouch

I accepted Big Daddy's Challenge to make 6 Multicam Pod pouches, so here's my Howto for your viewing pleasure.

Materials

Cordura of the desired pattern or color
 Stencil material
 Heavy Duty Nylon Thread
 Sewing Machine
 Tape Measure
 4 inch hook and loop velcro
 35.5 inches of 1 inch nylon webbing
 2 #24 Snaps
 Soldering Iron

1. Cut two pieces of cordura. One piece should be 8 x 9 inches and the other 22 in. x 3.5 with one end rounded out.



2. Cut a .5 x 7 inch piece of stencil material.
3. Sew it into one end of the 8.25 piece of corudra.



4. Stitch a 2 x 4 inch piece of loop velcro to the center of the 8.25 inch side



5. Sew a .25 inch hem in the square end of the 22 inch piece of cordura.



6. Cut Two 11 inch pieces of the 1 inch webbing and three 3.5 inch pieces of the webbing.
7. Measure 10.5 inches from the hem in step 4 and attach the first 3.5 inch webbing. Measure 1 inch from that piece and attach the 2nd, etc.



8. Fold one end of the 11 inch pieces of one inch webbing back onto itself a length of 1 inch and stitch around the edge.




9. With the soldering iron, melt a hole in the center of the 1 inch sewn portion and attach the button part of the snap. Do this to both 11 inch pieces.
10. Stitch down the center of the horizontal straps as shown below.



11. Place the non Sewn end of the 11 inch pieces of webbing butting against the top of the first 3.5 inch webbing. Space it .5 inches from the edge of the cordura. Do the same for the other 11 inch piece of webbing.

12. Measure up 1 inch on the end of the 11 inch webbing and lightly mark a line. You will stitch a square and then an X in the square to secure that webbing to the pod pouch back.

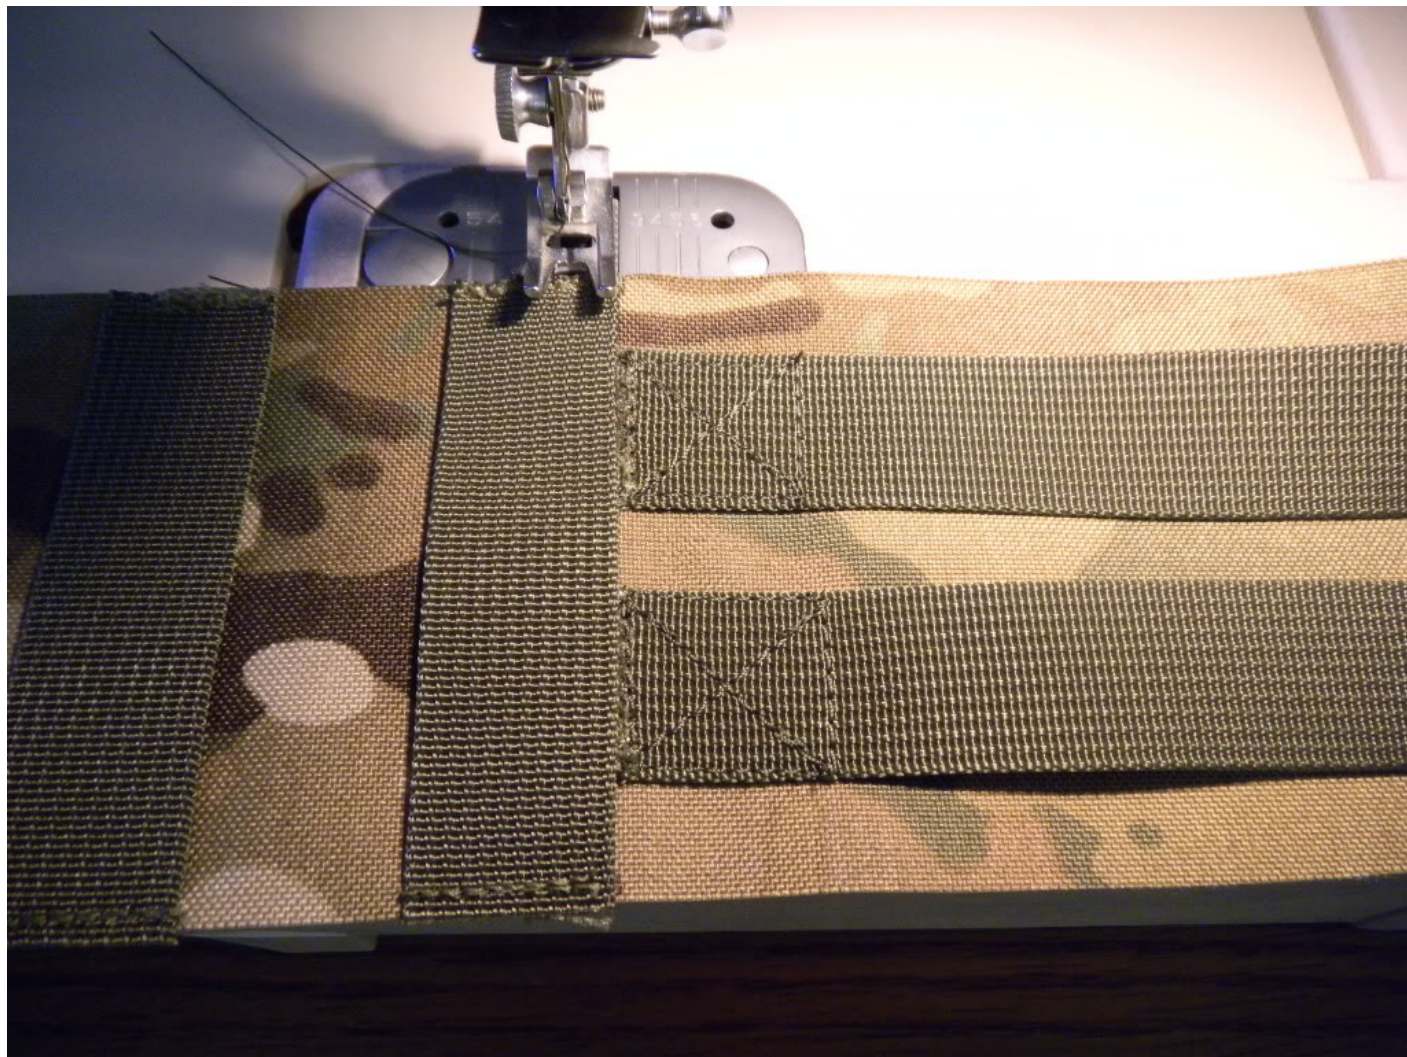


13. Start by stitching the curved end of the 22 inch piece of material inside out to the bottom of the 8.25 inch cordura. The curved part forms the bottom of the pod pouch.



14. Complete the pouch portion by stitching up the side of the pouch.



15. Turn the pouch right side out and sew a seam up the pouch flap on both sides.

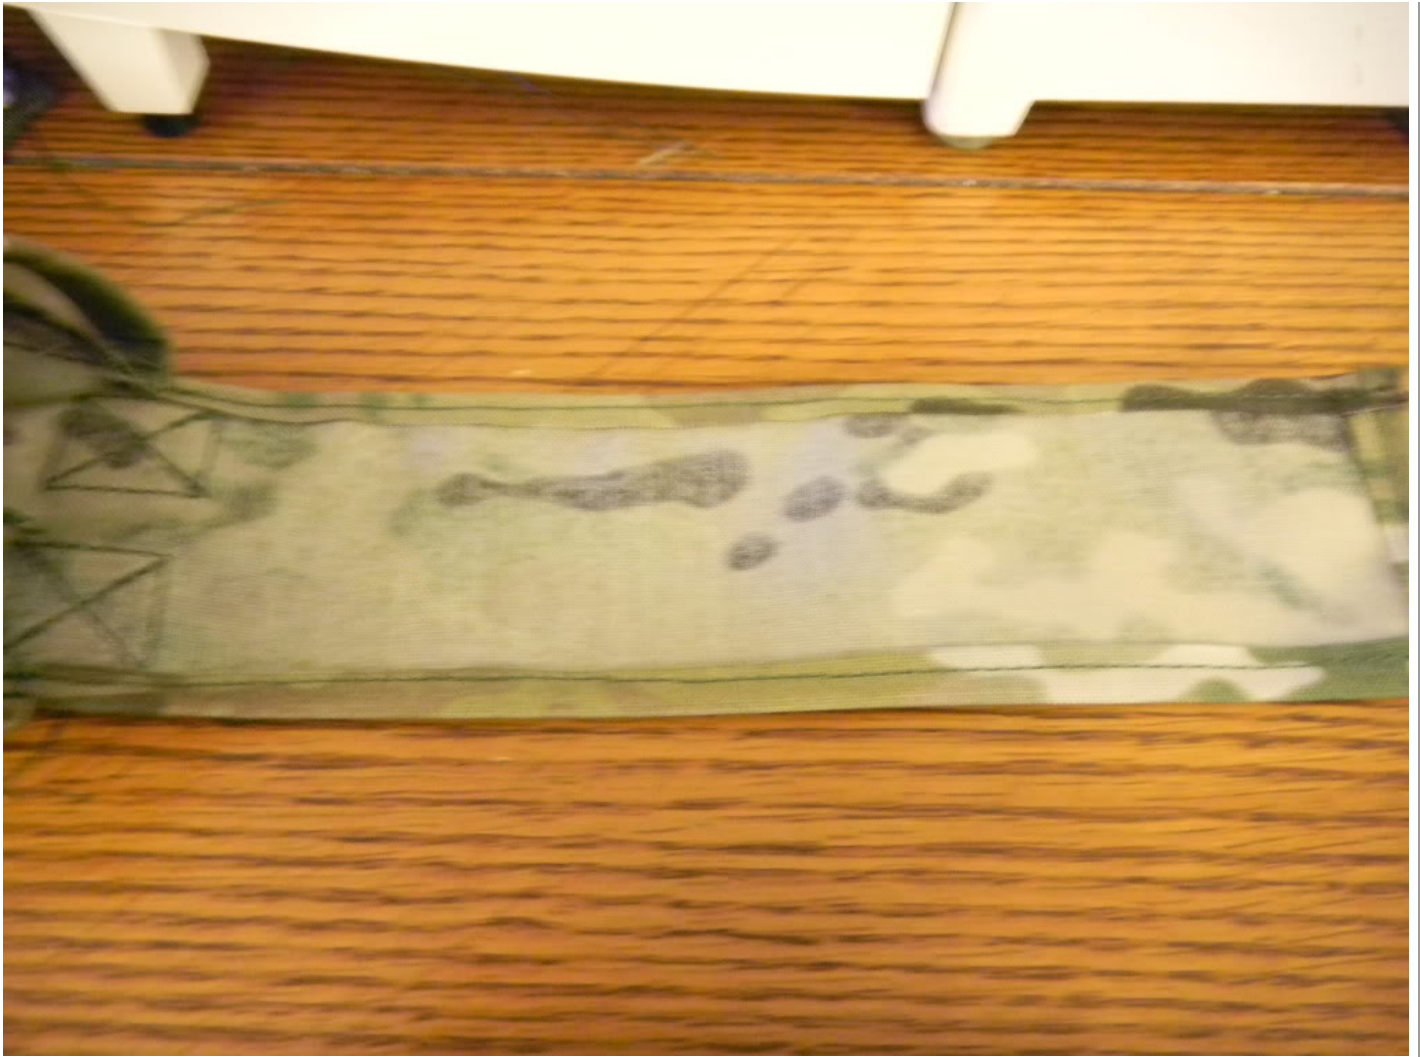

16. Stitch a 2 x 4 inch piece of hook velcro to the pod flap.





All 6 pouches



Please let me know if you have questions. 😊🔧😊

Sean (NOT a Canadian)
 Remote line Covers
 Barrel Socks
 Hydration Line Covers
 Molle Admin Panels
 Molle Air Tank Pouches
 Pod Pouches
 More...

K.C.K.

[Kanuck's Custom Kreations](#)
 "Blurring the line between tactical and practical" - Evilelviz

> "QUOTE" > FAST REPLY

12-05-2009, 06:54 PM

#2 (permalink) REP



SilentAssassn87 OFF
 Freelance Graphic Designer Paintballer Extraordinaire!
 MASTER SERGEANT

Join Date: Jun 2008
 Posts: 2,953
 Points: 17392
 Power: 382

Re: HOWTO: Make a Single Molle Pod Pouch

O_O Amazing. Do these hold 140's, and if so, how much are these going for 😊.

Click the Sig to visit my site!

> "QUOTE" > FAST REPLY

12-05-2009, 06:58 PM

#3 (permalink) REP

Join Date: Jan 2008
 Posts: 23,884